

CROCK·POT®

• THE ORIGINAL SLOW COOKER •

Please read the following usage tips before using your Crock-Pot® Lunch Crock™ Food Warmer:

1. When traveling with the entire unit, follow these simple steps:

- Use the Carry Handle to transport.
- Ensure the outer lid and removable food container lid is in place.
- Ensure the cord is wrapped around the cord wrap on the base. The cord will only wrap in one direction. Be sure to follow the cord exit and cord wrap arrow indicators on the bottom of the unit.

2. For added convenience, your Crock-Pot® Lunch Crock™ Food Warmer comes with a removable food container and food container lid that can be used to transport your food to and from the home every day. Simply leave the warming base at work and use the removable food container and lid for easy traveling.

3. Your Crock-Pot® Lunch Crock™ Food Warmer is meant to warm foods low and slow and will keep an optimal temperature so you don't have to worry about over heating. Just plug the unit into the wall outlet in the morning and your food will be ready to go for lunch.

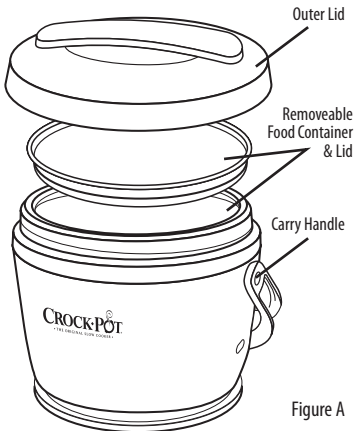


Figure A

NOTE: Heat times will vary depending on the starting temperature and consistency of the food. Refrigerated foods with a thicker consistency will take longer to heat up than room temperature foods with a thinner consistency.

4. While warming in your Crock-Pot® Lunch Crock™ Food Warmer, it is recommended to have the inner removable food container lid and outer lid in place to avoid spills and ensure the quickest heating time. See Figure A.

NOTE: It is normal for the inner removable food container lid to pop after the unit has been warming over time. Should this happen, do not attempt to push the lid back on as the outer rim of the food container will be hot.

5. When your food is ready, do not remove the inner food container as it will be hot. You can enjoy your lunch directly from the warming base of the food warmer.

Refer to User Manual for Important Safeguards, How to Use, Care and Cleaning, and Warranty.
Please call 1.800.323.9519 or visit us at www.crockpot.com

©2011 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. PN 153989