


# OUTDOOR CLEANING WITH PRESSURE WASHERS

For additional information or new ideas visit [www.outdoorcleaning.com](http://www.outdoorcleaning.com)


## Basic Cleaning

### Getting Started

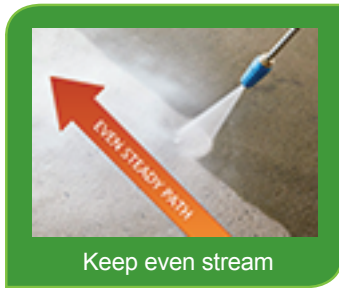


### 1 ALWAYS KEEP THE NOZZLE IN MOTION

Always keep the nozzle in motion, spraying at a steady speed and using long, even strokes. Take multiple passes over heavily soiled areas. Take care not to dwell on one spot for too long, especially when using narrow, high-pressure spray patterns.

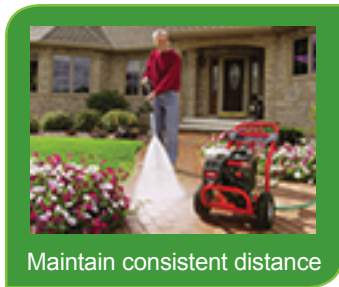

### 2 MAINTAIN CONSISTENT DISTANCE BETWEEN NOZZEL

Hold the spray wand so that the nozzle distributes the spray pattern across the surface evenly. Holding the nozzle at too low an angle can cause an uneven spray pattern, resulting in "zebra striping." Also, maintain a consistent distance between the nozzle and the cleaning surface to ensure consistent results and help flush dirt and debris from the area.

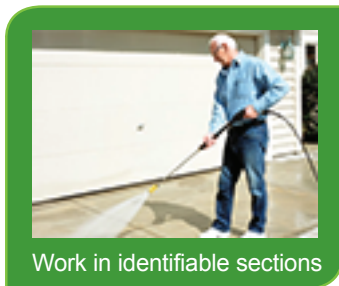

### 3 WET ENTIRE SURFACE TO PREVENT STREAKING

Work in identifiable sections, such as the area between the expansion joints in concrete. If there is a slope, work downhill to promote drainage and help flush away dirt and debris. Wet entire surface to prevent streaking.



### 4 SPRAY WITHIN THE WIDTH OF ONE TO TWO BOARDS

When pressure washing lap siding or wood, keep the spray pattern within the width of one to two boards.

